

# MegaRAID SAS 9261-8i RAID Controller



## Quick Installation Guide



Thank you for purchasing the LSI MegaRAID® SAS 9261-8i RAID controller. Before you install your RAID controller, please take a few minutes to read this quick installation guide. If you need more information about any topic covered in this guide, refer to the related documents on your *MegaRAID Universal Software Suite* CD.

**Note:** Record your controller serial number in a safe location in case you need to contact LSI.

The MegaRAID SAS 9261-8i RAID controller is a PCI-Express, low-profile RAID controller that offers a 6 Gb/s transfer rate. It controls eight internal SAS/SATA ports through two SFF-8087 Mini-SAS 4i internal connectors.

**Note:** SATA II is the only type of SATA supported by this RAID controller.

You can connect the LSI intelligent Battery Backup Unit 07 (LSIiBBU07) directly or remotely to the RAID controller. For more information about this battery, refer to the *MegaRAID iBBU07 Intelligent Battery Backup Unit Quick Installation Guide* on the *MegaRAID Universal Software Suite* CD.

### CONTROLLER INSTALLATION



Back up your data before changing your system configuration. Otherwise, you might lose data.

#### Step 1 Unpack the RAID Controller

Unpack the RAID controller in a static-free environment. Remove it from the antistatic bag,

and inspect it for damage. If the RAID controller appears to be damaged, or if the *MegaRAID Universal Software Suite* CD is missing, contact LSI or your MegaRAID OEM support representative.

The CD contains utility programs, device drivers for various operating systems, and the following documentation:

- *MegaRAID 6Gb/s SAS RAID Controllers User's Guide*
- *MegaRAID SAS Software User's Guide*
- *MegaRAID SAS Device Driver Installation User's Guide*
- *Battery Backup Units for MegaRAID SAS RAID Controllers User's Guide*
- *MegaRAID iBBU07 Intelligent Battery Backup Unit Quick Installation Guide*
- Software license agreement

#### Step 2 Prepare the Computer

Turn off the computer, and unplug the power cords from the rear of the power supply. Remove the cover from the computer.




Before you install the RAID controller, make sure that the computer is disconnected from the power and from any networks.

#### Step 3 Review the Jumpers and the Connectors

[Figure 1](#) shows the location of the jumpers and the connectors on the RAID controller. The jumpers are set at the factory, and you usually do not need to change them.

**Figure 1 Layout of the SAS 9261-8i RAID Controller**

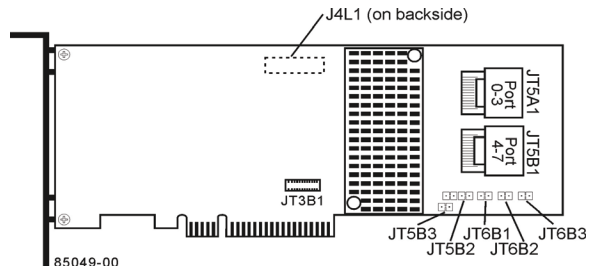


43513-00B

Table 1 describes the jumpers and the connectors on the RAID controller.

**Figure 2** Installing the MegaRAID SAS 9261-8i RAID Controller

**Table 1** Jumpers and Connectors

Jumper/Connector	Type	Description
J4L1	Remote Battery Backup connector (on the backside of the controller)	20-pin connector Connects the LSiBBU07 intelligent Battery Backup Unit remotely to the RAID controller.
JT3B1	Battery Backup Unit connector	20-pin connector Connects the LSiBBU07 intelligent Battery Backup Unit directly to the RAID controller.
JT5A1	x4 SAS Ports 0-3 Mini-SAS 4i connector	Connects the cables from the RAID controller to SAS drives or SATA II drives, or a SAS expander.
JT5B1	x4 SAS Ports 4-7 Mini-SAS 4i connector	Connects the cables from the RAID controller to SAS drives or SATA II drives, or a SAS expander.
JT5B2	Universal Asynchronous Receiver/Transmitter (UART) debugging	4-pin connector Reserved for LSI use.
JT5B3	Set Factory Defaults connector	2-pin connector Reserved for LSI use.
JT6B1	Test header	2-pin connector Reserved for LSI use.
JT6B2	Global Drive Fault LED header	2-pin connector Connects to an LED that indicates whether a drive is in a fault condition.
JT6B3	SAS Activity LED header	2-pin connector Connects to an LED that indicates drive activity.

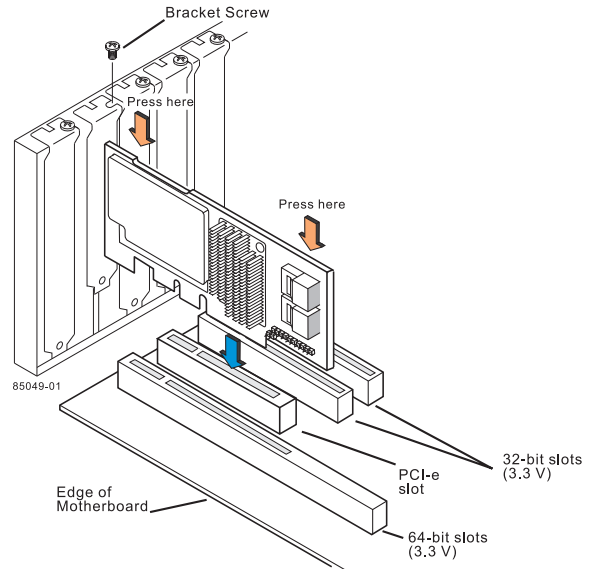

**Step 4** Install the RAID Controller

Insert the controller into a PCI Express slot on the motherboard, as shown in Figure 2. Press down gently, but firmly, to seat the card correctly in the slot. Secure the RAID controller to the computer chassis with the bracket screw.

**Note:** This is a PCI Express x8 card and it can operate in x8 or x16 slots. However, some PCIe slots support only PCIe graphics cards; if a RAID controller is installed, it will not function.

**Note:** Refer to the guide for your motherboard for information about the PCI Express slot.

**Step 5** Configure and Install the SAS Devices, SATA II Devices, or Both in the Host Computer Case

Refer to the documentation for the devices for any reinstallation configuration requirements.

**Step 6** Connect the RAID Controller to the SAS Devices, SATA II Devices, or Both in the Host Computer Case

Use SAS cables to connect the RAID controller to SAS devices, SATA II devices, or both. See Figure 1 to view the connector locations.

**Note:** Refer to the *MegaRAID 6Gb/s SAS RAID Controllers User's Guide* on the *MegaRAID Universal Software Suite* CD for detailed information about the SAS cables.

**Step 7** Turn on the Power to the Computer

Reinstall the computer cover, and reconnect the power cords. Turn on the power to the computer. Make sure that the power is turned on to the SAS devices and the SATA II devices before or at the same time that the power to the host computer is turned on. If the power is turned on to the computer before it is turned on to the devices, the computer might not recognize the devices.

The firmware takes several seconds to initialize. During this time, the controller scans the ports.

**Step 8** Run the WebBIOS Configuration Utility

Run the WebBIOS Configuration Utility to configure the groups and the virtual drives. When

the message Press <Ctrl><H> for WebBIOS appears on the screen, immediately press CTRL+H to run the utility.

**Note:** Refer to the *MegaRAID SAS Software User's Guide* for detailed steps on configuring groups and virtual drives.

## Step 9 Install the Operating System Driver

The controller can operate under various operating systems, but you must install the software drivers first.

The *MegaRAID Universal Software Suite* CD includes the software drivers for the supported operating systems, along with documentation. You can view the supported operating systems and download the latest drivers for RAID controllers from the LSI web site at: <http://www.lsi.com/cm/DownloadSearch.do>. Access the download center, and follow the steps to download the driver.

Refer to the *MegaRAID SAS Device Driver Installation User's Guide* on the *MegaRAID Universal Software Suite* CD for more information about installing the driver. Be sure to use the latest service packs that are provided by the operating system manufacturer and to review the `readme` file that accompanies the driver.

## SUPPORTED RAID LEVELS

This RAID controller supports drive groups using the following RAID levels:

- **RAID 0 (data striping):** Data is striped across all drives in the group, enabling very fast data throughput. There is no data redundancy. All data is lost if any drive fails.
- **RAID 1 (drive mirroring):** Data is written simultaneously to both drives in the drive group, providing complete data redundancy if one drive fails. RAID 1 supports an even number of drives from 2 to 32 in a single span.
- **RAID 5 (drive striping with distributed parity):** Data is striped across all drives in the group. Part of the capacity of each drive stores parity information that reconstructs data if a drive fails. RAID 5 provides good data throughput for applications with high read request rates.
- **RAID 6 (drive striping with distributed parity across two drives):** Data is striped across all drives in the group and two parity drives are used to provide protection against the failure of up to two drives. In each row of data blocks, two sets of parity data are stored.
- **RAID 00 (data striping across RAID 0 drive groups):** RAID 00 is a spanned drive group that creates a striped set from a series of RAID 0 drive groups.
- **RAID 10 (RAID 1 and RAID 0 in spanned groups):** RAID 10 uses mirrored pairs of drives to provide complete

data redundancy. RAID 10 provides high data throughput rates.

- **RAID 50 (RAID 5 and RAID 0 in spanned groups):** RAID 50 uses both parity and drive striping across multiple drives to provide complete data redundancy. RAID 50 provides high data throughput rates.
- **RAID 60 (RAID 6 and RAID 0 in spanned groups):** RAID 60 uses both distributed parity across two parity drives and drive striping across multiple drives to provide complete data redundancy and high fault tolerance.

**Note:** Refer to the *MegaRAID SAS Software User's Guide* on the *MegaRAID Universal Software Suite* CD for more information about RAID levels

## TECHNICAL SUPPORT

For assistance in installing, configuring, or running the SAS 9261-8i RAID controller, contact an LSI Technical Support representative.

Click the following link to access the LSI Technical Support page for storage and board support:

[http://www.lsi.com/support/storage/tech\\_support/index.html](http://www.lsi.com/support/storage/tech_support/index.html)

From this page, you can send an email or call Technical Support, or submit a new service request and view its status.

### E-mail:

[http://www.lsi.com/support/support\\_form.html](http://www.lsi.com/support/support_form.html)

### Phone Support:

[http://www.lsi.com/support/storage/phone\\_tech\\_support/index.html](http://www.lsi.com/support/storage/phone_tech_support/index.html)

1-800-633-4545 (North America)

00-800-5745-6442 (International)

**Note:** The international toll-free number does not require country-specific access codes.



43513-00 Rev. B, December 2009

Find a list of LSI Corporation's U.S. distributors, international distributors, sales offices, and design resource centers on the LSI web site at:

<http://www.lsi.com>

LSI, the LSI logo design, and MyStorage are trademarks or registered trademarks of LSI Corporation. All other brand and product names may be trademarks of their respective companies.

Copyright © 2009 by LSI Corporation. All rights reserved.

LSI Corporation reserves the right to make changes to any products and services herein at any time without notice. LSI does not assume any responsibility or liability arising out of the application or use of any product or service described herein, except as expressly agreed to in writing by LSI; nor does the purchase, lease, or use of a product or service from LSI convey a license under any patent rights, copyrights, trademark rights, or any other of the intellectual property rights of LSI or of third parties.