


King Slide® — AP61-843


1) 將內軌取出並收回中軌

Take out the inner member and slide the intermediate member back.

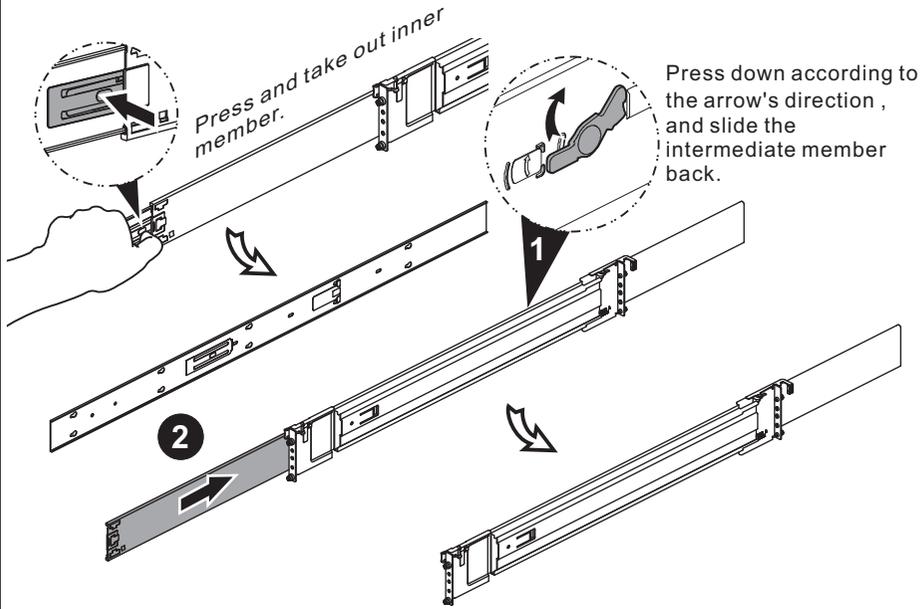


3) 將外軌+托架裝入機架

Attach the outer member/bracket to the rack.

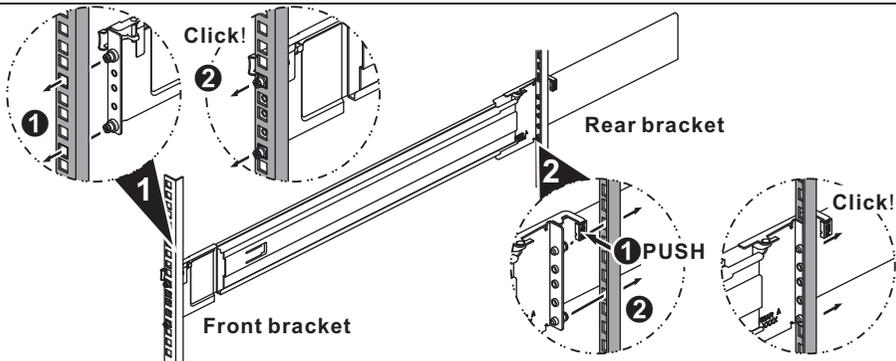


Removing bracket

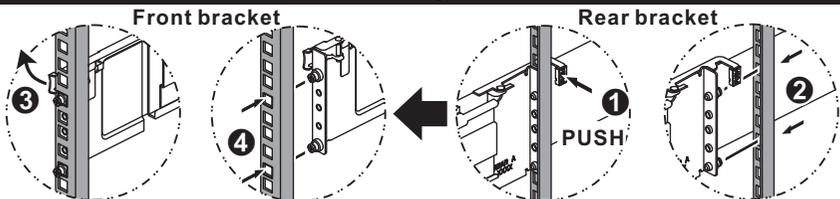

2) 將機台裝上內軌

Install the inner member onto the chassis.

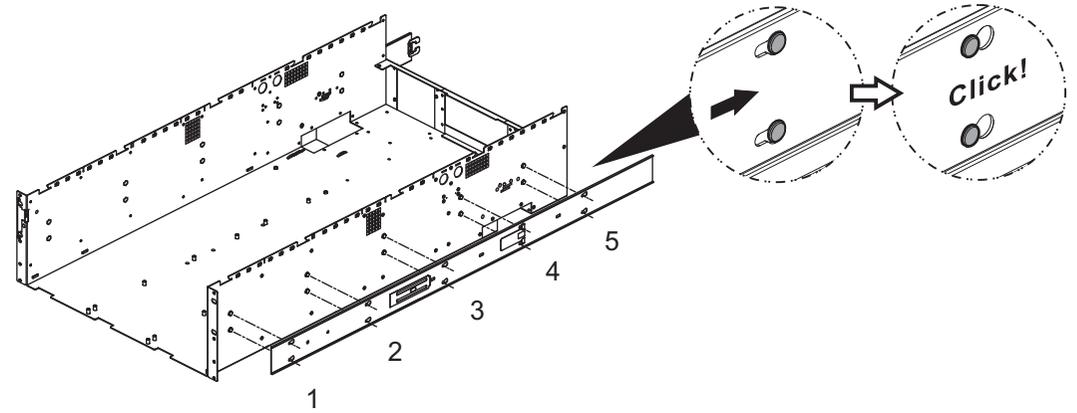

4) 裝入機箱

Insert the chassis to complete the installation.

Step 1.
Pull the middle member fully extended in lock position, ensure ball bearing retainer is located at the front of the middle member.

Step 2.
Insert chassis into middle-outer member.
When hit a stop, pull / push release tab to retract chassis into rack.

